



1. Open web platform of BF series, click "Upgrade Firmware" on the bottom left.
2. Click on "Browse".  
Choose Boot Code (\_boot). **(Photo 1)**
3. After successfully upgrading boot code, the unit will reboot and it will show "Running in Boot" on the screen. **(Photo 2)**

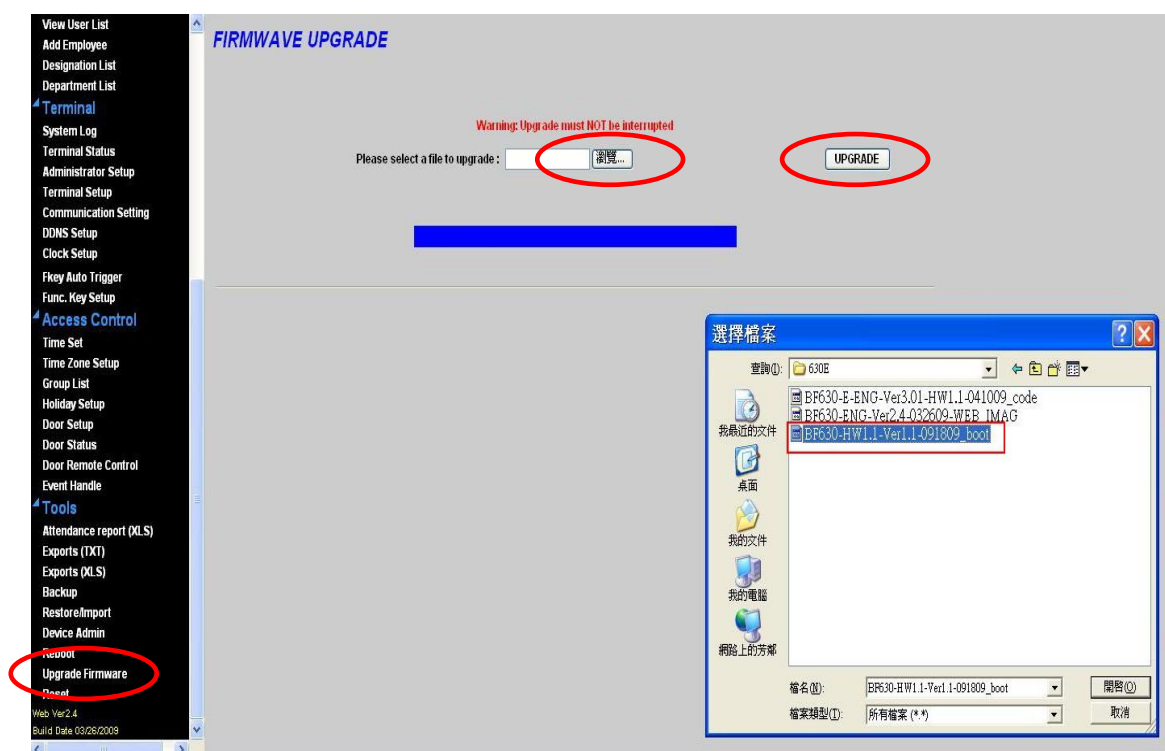


(Photo 1)

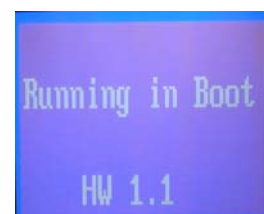

(Photo 2)

4. Open TFTP, and set Host IP into "192.168.0.125" (Photo 3)

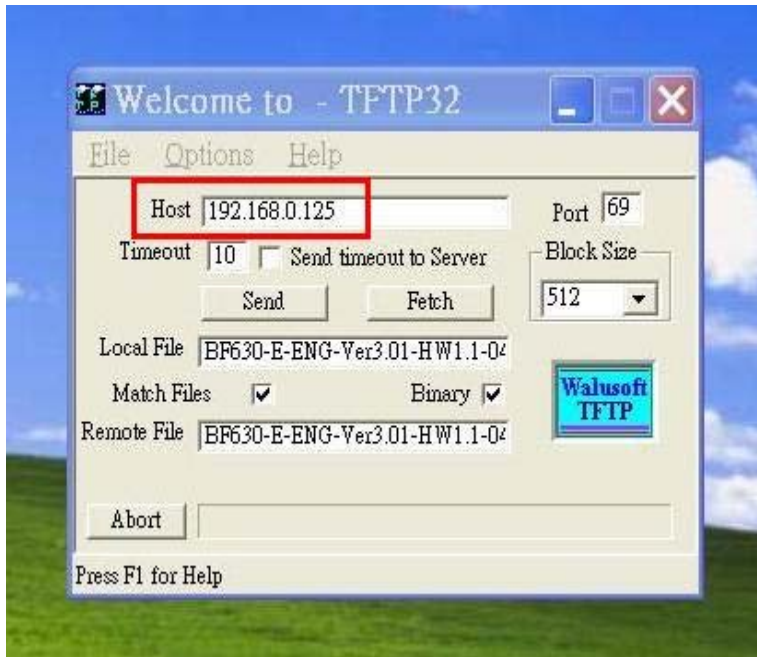


(Photo 3)

5. Click "File" on the toolbar and click "Send". (Photo 4)




(Photo 4)

6. Choose code (\_code). (Photo 5)

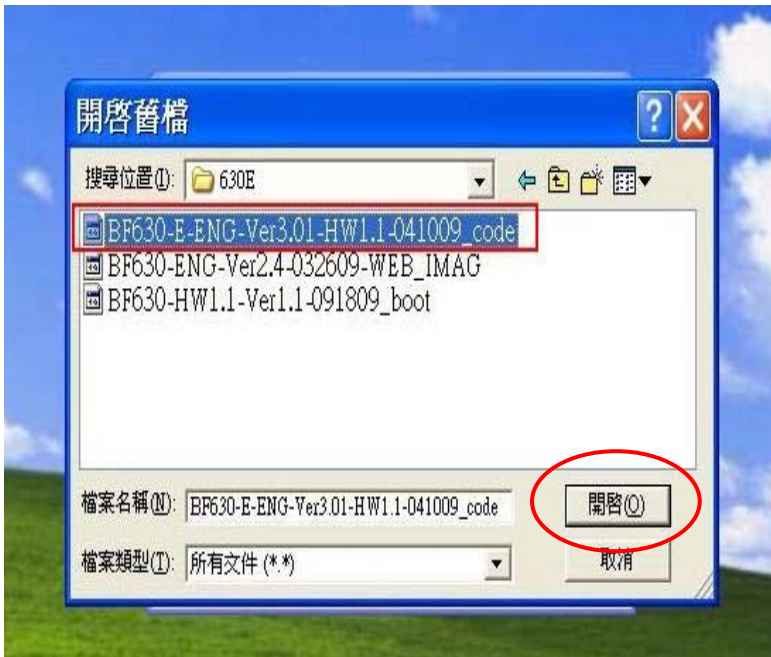


(Photo 5)

7. Click "Send". (Photo 6)

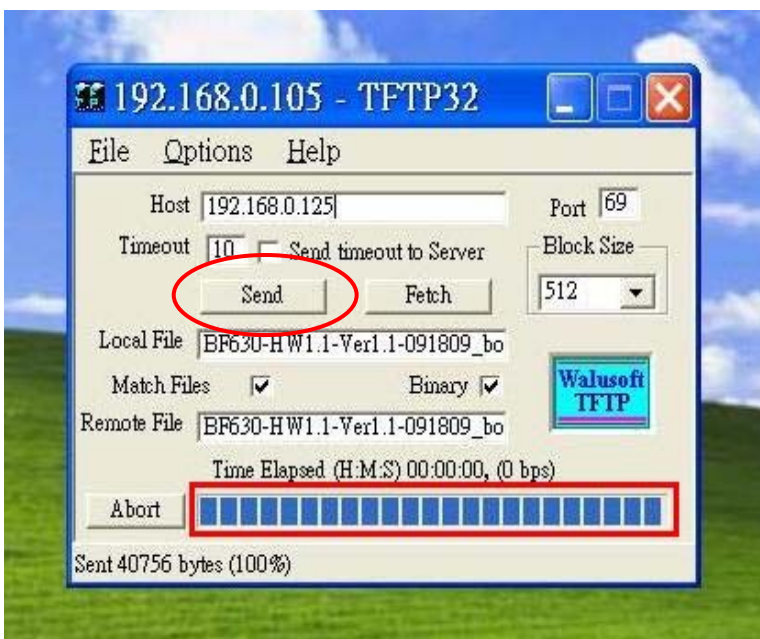

(Photo 6)

8. Repeat step 1&2 to upload web code (WEB\_IMAG) (Photo 7)

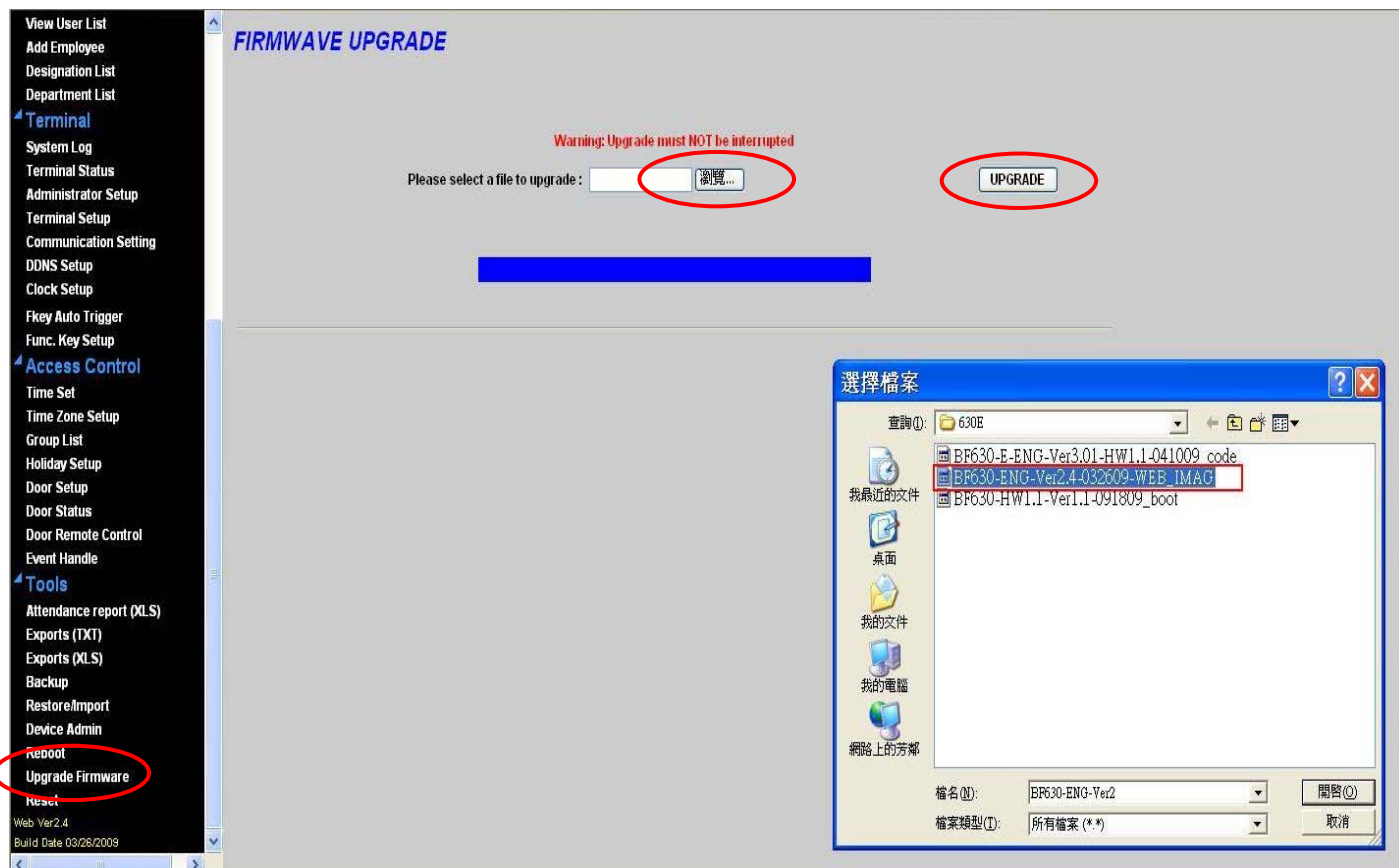

(Photo 7)