



Web Server Access Log Message

Event list

Message	Explanation
Open too long	When the door is not closed within the setting time, this message will show.
Closed after alert	This message will show when the door is closed after "Open too long".
Force Open	"Force Open" is a function in "Remote Control" which all the doors will be compulsively open.
Force Close	"Force Close" is a function in "Remote Control" which all the doors will be compulsively closed, no one is able to open doors in all means.
Back to Normal	"Back to Normal" is a function in "Remote Control" which all the doors will be set into normal open/close. Users are able to authorize.
UNAUTHORIZED	The badge is not matched.
UNREG	Card/User is not registered
DEACTIVATED	This message will show when user is not activated.
EXPIRED	This message will show when user/card reaches its expiration.
ANTI_PB REJ	When the function "Antipass back" is on, level of antipass back should be corresponded. Otherwise a message of "ANTI_PB REJ" will be shown. Antipass back: To prevent a card holder from passing their card back to a second person to gain entry into the same controlled area.
DISALLOWED DOOR	A message of "Disallowed door" will be showed when a user authorizes his card at a door which he does not allowed to enter.
DOOR INTRUDED	A message of "Door Intruded" will be showed when the door is intruded.
DOUBLE REJ	This message will show when user authorizes his badge at the terminal which the Doorsetup level ruled that it must be authorized with more than 1 badge.
CASE OPENED	A message of "Case opened" will be showed when the product case is opened.
EXIT BUTTON	A message of "Exit button" will be showed When Door is opened thru exit button.
NORMAL CLOSED	A message of "Normal closed" will be showed when door is closed normally.
ANTI DURESS	"Anti duress" is under the situation when someone is forced to open door. The victim can enter a " special code" and authorizes card after that, it will trigger an alarm in Event Handle. A message of "Anti Duress" will show under this circumstance.
FIRE ALARM	The message of "Fire alarm" will be showed when the event is triggered.

Defense On	The message of "Defense on" will be showed when user sets Defense State into ON. (Only on SoMac)
Defense Off	The message of "Defense off" will be showed when user sets Defense State into Off. (Only on SoMac)
CASE CLOSED	A message of "Case closed" will show when the case of product is being closed.
Open Time Error	The message of "open time error" will show when the card is authorized during the illegal time set.
LR(Lock Release) Start	Lock Release time zone starts, users can enter/exit the door without authorizing their badge.
LR(Lock Release) End	Lock Release Time Zone Ends.
Warm Start	Terminal is restarted when user reboots the terminal via "Reboot" button.
Cold Start	The power of terminal is turned on from the "off" state.
Battery Power On	The message of " Battery Power On" will be showed when power is offered from back-up battery.
Normal Power On	The message of " Normal Power On" will be showed when power is offered from local power.
BF50 Online	BF50 is successfully connected with SEMAC and WebPass.
BF50 Offline	BF50 is not connected with SEMAC and WebPass.
Sensor Short Circuit	This message will be showed when the circuit is short.
Sensor Open Circuit	This message will be showed when the circuit is open.
Invalid Password	This message will be showed when user enters a wrong password.
Interlock Violation	"Interlock" is the event when user leaves the 1st door open, he/she will not be able to open the 2nd doors. This message will be showed when someone violates interlock.
Emergency Open	This message will be showed when emergency happens, all doors will be forced open via "Emergency Open" function in "Remote Control".
Emergency Close	This message will be showed when emergency happens, all doors will be forced close via "Emergency Close" function in "Remote Control".
Enable Fire Alarm	The message of "Enable fire alarm" will be showed when "Fire Alarm Detection" is switched on via "Event Handle" function in "Remote Control".
Disable Fire Alarm	The message of "Disable fire alarm" will be showed when "Fire Alarm Detection" is switched off via "Event Handle" function in "Remote Control".
Normal Opened	A message of "Normal opened" will be showed when door is switched back to normal state.

Off Alarm Tigger Manually	This message will be showed when user fills in "Zero" in "Launched time of Event Type", the alarm will be on until user manually switches it off. <The setting is in "Event Handle">
Off Alarm Tigger Auto	This message will be showed when user fills in a number greater than Zero in "Launched time of Event Type" , the alarm will be on until user manually switches it off. <The setting is in "Event Handle">
IP Conflict	This message will be showed when the same IP is used by more than one terminal.
Keypad Disabled	This message will be showed when keypad on terminal has been disabled temporarily for 30 sec after user has entered wrong passwords over than three times.
Keypad Recover	This message will be showed when functionality of keypad is on.
WEBPASS Online	This message will be showed when WebPass comes online.
WEBPASS Offline	This message will be showed when WebPass disconnects with termnial.
Pulse Open Door	This message will be showed when the door is opend via "Pulse Open Door" in "Remote Control".