

BF-603 Reader INSTALLATION 安裝指南

A. 型號

BF-603A-EW/MW



BF-603B-EW/MW



BF-603C-EW/MW



BF-603D-EW/MW



B. Package content 包裝內容

● PARTS 包裝：

Reader X 1, Accessory kit X 1, Installation manual X 1

感應讀頭 X 1，配件包 X 1，安裝指南 X 1

C. INSTALLATION 安裝

1. Open the back cover of reader. 打開讀卡機後蓋。
2. Install the back cover to the position by using the attached screws. 用內附螺絲將後蓋固定在安裝位置。
3. Pass the cable through the central circle hole of back cover. 將纜線由後蓋中央圓孔穿出。
4. Combine the body. 組合機體。

● RECOMMENDED 建議採用

Cable with shielded, Linear DC power supply. 遮蔽電纜線，線性直流電源

● SPECIFICATIONS 規格

Voltage range 電壓範圍：9 ~ 24 VDC

Max distance for Wiegand is 80M 微根通訊最遠距離：80M

● Notice 注意事項：

- ◆ Do not connect other cable to the power unit except red and black power cable.
除電源線外，其他電線勿與電源接觸。
- ◆ Do not apply any unverified power supply to the unit or the hardware system may be damaged or may cause system an unstable condition.
採用不符合規格之變壓器可能會造成系統不穩定或對硬體造成損傷。

D. Connection 接線



- BF-50 RJ-45 cable color read for WG Reader connection.

BF-50 RJ-45 與 WG 感應讀頭接線說明

1. Orange/White 橘白 → D0
2. Orange 橘 → D1
3. Green/White 綠白 → Output, controlled the LED of Reader. 讀頭 LED 控制接點
4. Blue 藍 → Output, controlled the Buzzer of Reader. 讀頭蜂鳴器控制接點
5. Blue/White 藍/白 → Reader sensing control.
(will read cards while GND is short. 與 GND 短路讀卡)
6. Green 綠 → To detect Reader. 偵測讀頭
7. Brown/White 棕/白 → Power (-)
8. Brown 棕 → Power (+)